

TITAN-JET

泰 腾 捷 喷 印

Http://www.titanjet.com.cn

TEL: +86-0760-88667090/1/5/6

Integrity Excellence Profession



Tao Tech Digital Technology CO.,LTD is a professional manufacturer and supplier engaged in R&D, Manufacture and Distribution of digital inkjet printer equipment. We research and development the high speed, high resolution and stable printing control system in many kinds of industry printing application by USA TRIDENT and Japan EPSON print-head ,such as textile ,ceramic ,solvent, water base, UV printing.

Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>

email:sales@titanjet.com.cn

Add : No.6-2,Jin Hua Zhong Road,Zhongshan City,Guangdong,China

Titan-jet 1626 water base & eco-solvent piezo printer

Instruction manual

Statement of responsibility and copyrights

The manual is just for assembling the printer after you purchased the Titan-jet 1626. Our company does not responsible for any expression and obligation on content. Maybe there are many writing errors and careless omission of technical description even if detailed examination, we would like to accept advice to improve our service. All works by Tao Tech Digital Technology CO.,LTD , and the work copyright law by the People's Republic of China Copyright Law protection. Do not engage in part or all in of the manual additions and deletions, adapt, excerpt, reproduce or imitate behavior without agreement.

Index

	Page
Foreword introduction -----	01
Chapter I Brief introduction	
1) Power Supplier safety -----	04
2) The Do's and The Don'ts -----	04
3) Safety location and use of environment -----	04
4) Ink Location and use precautions -----	05
5) Performance parameters -----	05
Chapter II Installation of Printer	
1 、 To know about TITAN JET Printer -----	07
2 、 Operating instructions of Keypad -----	08
3 、 Installation -----	08
4 、 Electrify、 Carriage reset、 outer setup、 material forward and backward -----	11
Chapter III Use of MainTop	
1 、 Installation -----	12
1), How to Install Maintop -----	12
2) Setup of printer driver and printing interface -----	13
2 、 How to use Maintop -----	16
3 、 Printing images -----	19
4 、 Others about Maintop -----	22
Chapter IV Printing Control System	
1 、 Installation of software and USB driver -----	22
2 、 Main Menu -----	28

Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>

email:sales@titanjet.com.cn

Add : No.6-2,Jin Hua Zhong Road,Zhongshan City,Guangdong,China

- 2 -

1) File Menu	28
2) Printing Menu	29
3) Tools	29
4) Help	29
3 、 Tool Bar Introduction	29
4 、 Printing	30
5 、 General settings	30
6 、 Status information	30
7 、 Other information about Printing control system	31
1) Print head Printing Parameter	31
2) Print calibration	31
3) Other parameters calibration	33
8、 Adjust after control software installed	36
Chapter V Maintenance guide	40

Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>

email: sales@titanjet.com.cn

Add : No.6-2, Jin Hua Zhong Road, Zhongshan City, Guangdong, China

Chapter I Brief Introduction

Summary

Thank you very much for purchasing our product, this manual can help you to assemble and use the printer, through the index, you can find the topic related quickly. Please place the reference manual easy to reach.

This manual is made up of four parts: 1):How to operate the Printer ,
2):How to use Printing control software
3):How to use Maintop software,
4):Daily Maintenance of Printer

The machine have passed the strict inspection before delivery and attached labels .To avoid damage to the printer,please read the manual carefully before you use the printer。

1. Power supplier safety

Attention: For safety of the operator and Printer, ground wire must be connected! The printer should be installed by qualified maintenance technician.

- A. Power supply: single-phase 220V AC /50HZ. Max power: 1000W, Print power: 100W
- B. Using only the power type that the printer label identified. You can choose 110V AC or 220V AC power supply according to your countries or regions' applications.
- C. Connecting all equipments to a properly ground outlet to avoid the use of sockets with those in the frequent switching between on and off the device (such as: photocopiers, air-conditioning systems) in the same circuit.
- D. Avoid to use of wall-board switch or autotimer controlled outlet, always turn off your printer by the power switch which is on the right side of printer.
- E. Do not use damaged or broken power wire.
- F. If additional power wire has to be used, make sure the sum of amperage of other device and the additional power device can not exceed the rated amperage of the power supply. Do remember the sum of amperage of other devices and the additional power wire plugged into the wall can not exceed the wall outlet's rated amperage of power supply.
- G. Keep your computer system away from electromagnetic interference source(s) such as loudspeaker or wireless telephone. Do not try to repair printer by yourself while meet problems, seeking for help from printer maintenance technicians in time.

2. Attentions for operating printer

- A、Don't plug off printer power supply or other related data cable before printer power supply has been turned off.
- B、To avoid the unnecessary loss caused by behind cleaning the tools or other articles which put on the print table or cover of printer by careless after machine running., Do not put tools or other articles on printer table or cover.
- C、Make sure the carriage has been fixed on the original place before moving printer.

Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>

email:sales@titanjet.com.cn

Add : No.6-2,Jin Hua Zhong Road,Zhongshan City,Guangdong,China

- 4 -

3. Attentions for installation and use environment

The printer should be positioned stably and levelly, and well for ventilation, for easier plug on/off, Place your printer close to wall outlet. Don't exposure printer under sunlight, highlight or other heat sources to keep a good temperature and humidity environment. Using temperature: 18-30°C ; Humidity: 40%-80%. For best printing status, air conditioner and thermometer are required. Printer must far away from strong radiation interference source. UPS and power stabilizer (power above 1500W) is suggested to adopt.

4. Attentions for Ink placement and using

Ink should be out of reach of children to prevent them touch or inhale in, washing with soap and water if ink contact with skin; washing with fluid water immediately if ink contact with eyes; to avoid ink leakage, don't shaking the ink bottle; after a period (2 months) of using, ink bottle should been cleaned and dry in the air, cleaning printer before replace new ink bottle to make sure printing quality. Store ink in a cool place and don't exposure under sunlight

5. Parameter

Print-head	Epson DX6	Resolution	1440 DPI
Number of print head	2	Number of Nozzle	1080 (9 * 60*2)
Color	C M Y K Lc Lm	Color Range	16.7million
Print table width	1720 MM	Print width	1600 MM
Speed	2 PASS	24 m2 /hr	
	4 PASS	12 m2 /hr	
	6 PASS	8 m2 /hr	
	8 PASS	6 m2 /hr	
Ink	Aqueous, pigment, Eco-solvent,sublimaiton	Color Management	ICC or density curve
RIP Software	MAINTOP 5.3	Operation System	Windows2000, XP
Interface	USB 2.0	Power Supplier	50HZ/60HZ,220V/110V, 10A
Heating	Front heating	Dry	Fun
Material	Paper, Frontlit, Flex banner, mesh, leather...	Image format	Bmp,TIF,Jpg,Pdf...
Media Handling	Roll to roll, sheet by sheet	Humidity	40% - 70%
Dimension	2.7M * 0.76M * 0.74M	Weight	250 KG

Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>

email:sales@titanjet.com.cn

Add : No.6-2,Jin Hua Zhong Road,Zhongshan City,Guangdong,China

Chapter II Installation and Acquaintance of Printer

1、 Acquaintance of Printer

Illustration of Titan-jet 1626 water base & eco-solvent piezo printer



2. Keypad operating instruction of Titan-jet 1626 water base & eco-solvent piezo printer



- Clean: Automatic Ink suction button
- Roller Start: Automatic material feeding, take up button
- Print/Pause: Printing start, pause, continue button
- Fan: Fan button for drying
- Move Up: Material move backward button
- Move Down: Material move forward button

Tel : +86-760-88667089 / 88667090
Fax : +86-760-88667096
Web: <http://www.titanjet.com.cn>
email: sales@titanjet.com.cn
Add : No.6-2, Jin Hua Zhong Road, Zhongshan City, Guangdong, China

3. Installation of Titan-jet 1626 water base & eco-solvent piezo printer

Installation steps after unpacking:

3.1: unpacking: Remove the Buffer foam and dustproof plastic wrap after unpack, take out of all spare parts, check



Attention: Check carefully to confirm no spare parts lost!!

3.2: installing the stand

Take out 2 stander, stabilize beam. to fix stander with 10pcs M6*10 inner hexagon screw. Fix the Square stabilize beam on the stander with 8pcs M5*10 cross screw.(See illustration)



Installation illustration of Stander and Square stabilize beam

3.3 Installation of material holder and fans

3.3.1. Installation of material holder

A: Fix the material holder on standers with 16 pcs M4*10 cross screw(each side 8 pcs screw).

Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096


Web: <http://www.titanjet.com.cn>

email: sales@titanjet.com.cn

Add : No.6-2, Jin Hua Zhong Road, Zhongshan City, Guangdong, China



B: Wear the material holder tray on steel roller, fix the square metal and steel roller with 10 pcs M4*10 cross screw onto stander(each side 5 pcs screw),Install it well so as to material feeding can be controlled well when printing.

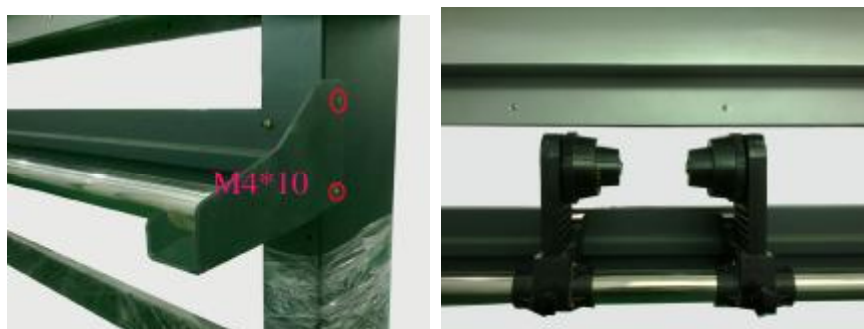

3.3.2, Installation of fans.

Fix the fan on stander with 6 pcs M5*10 cross screw(each side 3 pcs screw) See illustration below:



Overall view of printer stander :

Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>

email:sales@titanjet.com.cn

Add : No.6-2,Jin Hua Zhong Road,Zhongshan City,Guangdong,China



3.4. Installation of body (printing part)

Remove the Buffer foam and dustproof plastic wrap after unpack, put on stander in right position by forklift and fix with 4 pcs M5*20 cross screw



Assembling illustration

Attention: Be careful when assembling to make sure every step is accurate and screw fix well

Overall view of printer:

Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>


email: sales@titanjet.com.cn

Add : No.6-2,Jin Hua Zhong Road,Zhongshan City,Guangdong,China



4 、 Electrify, reset of carriage and others

4.1. take out the power wire from spare parts box and connect printer to 220V AC power supplier, main board will release a bee sound when press the switch on, and the 6 lights on the carriage will lighting, see illustration:

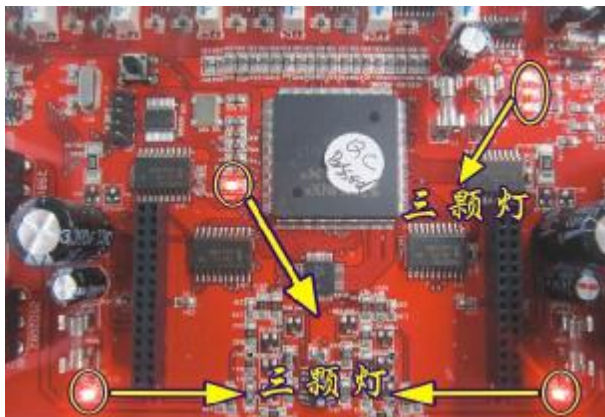

6 Lights

4.2. The carriage will move to right slowly when turn on the printer, then to left a little while the limit stopper which on the right front of the carriage move to the upside position of the yellow limit switch and at least arrived at the middle of limit switch, during this action, the red light on limit switch will gleam, at the same time, the main board will respond a sound, this actions mean the carriage reset normal, otherwise you need to check if the connections of machinery and limit switch connect well or not.



Limited switch

4.3 press the fun button on the key panel  , turn on the power button in the front of the printer.

Tel : +86-760-88667089 / 88667090


Fax : +86-760-88667096



Web: <http://www.titanjet.com.cn>

email: sales@titanjet.com.cn

Add : No.6-2, Jin Hua Zhong Road, Zhongshan City, Guangdong, China

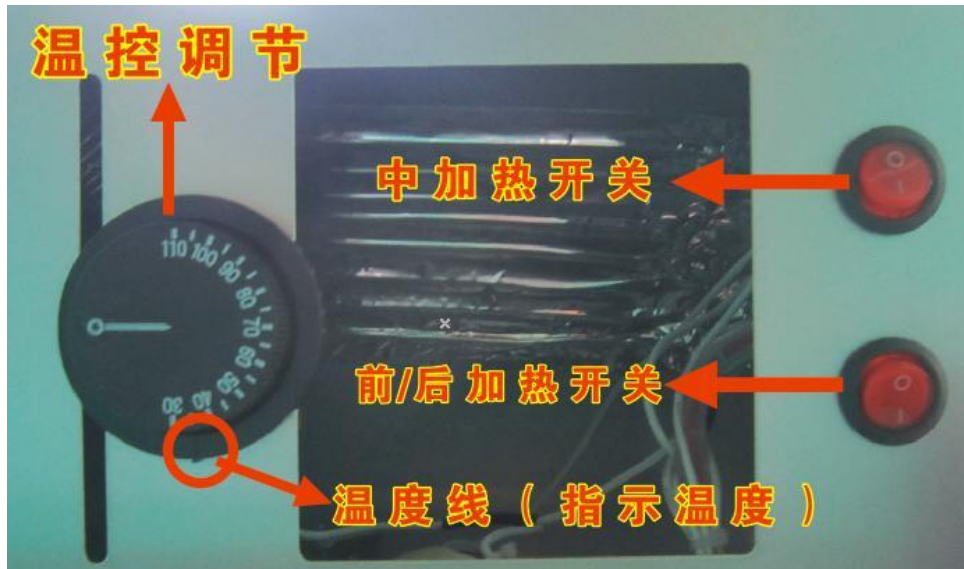check all funs work well or not, turn on the button for front, middle, back heating, check heating system work well or not.



4.4 press move down , move up  button to check material feeding and backward function work well or not, press one time for action, second time for pause

4.5 move the wiper front and back slightly to testing the wipe motor, if the wiper can not move freely; apply some lubricating oil to the small guide rail.


Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>

email: sales@titanjet.com.cn

Add : No.6-2, Jin Hua Zhong Road, Zhongshan City, Guangdong, China

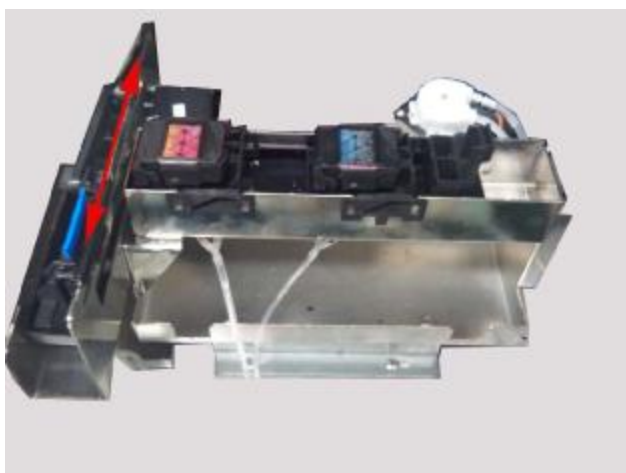


Chapter III Using of Maintop software

1. Installation of RIP software:

1. 1、 Installing software:

Insert the Maintop CD into CD-Rom of your computer, double-clicking the SETUP.EXE icon, the software will install automatically:

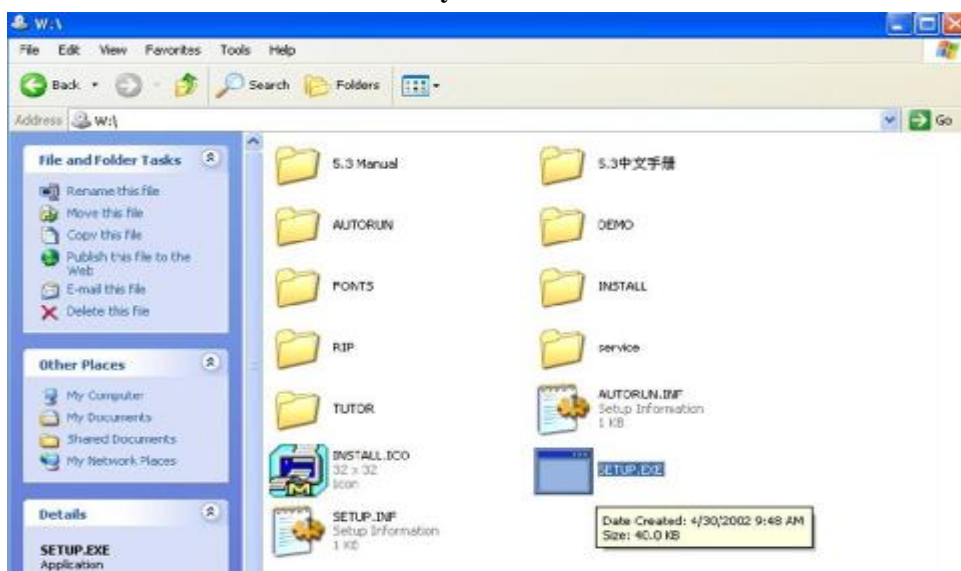


Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>

email: sales@titanjet.com.cn

Add : No.6-2, Jin Hua Zhong Road, Zhongshan City, Guangdong, China

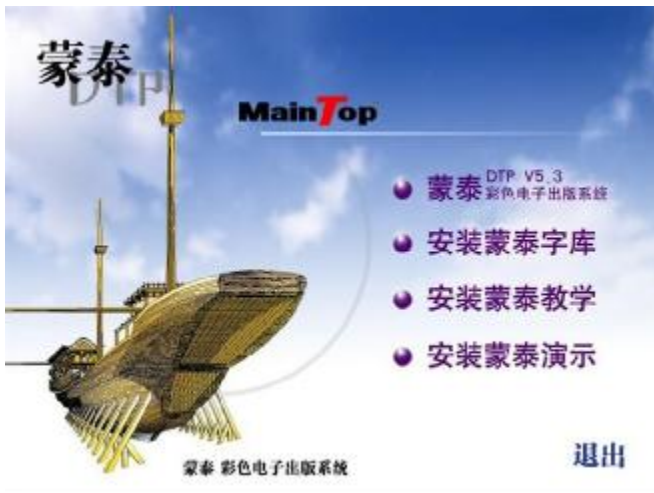

Click first one to start install



Choose installing root and click OK



Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>


email: sales@titanjet.com.cn

Add : No.6-2, Jin Hua Zhong Road, Zhongshan City, Guangdong, China



1.2、Maintop printer Setup and installing:

A、after installed the software, operate as following step: start-procedure-maintop-open software-file- printer setup

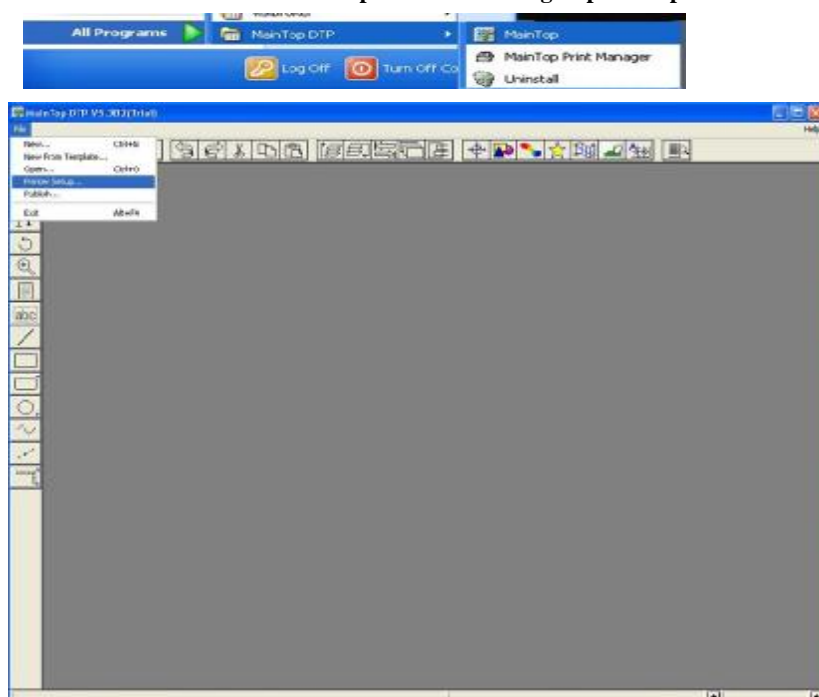

B、dialogue box will appears after opening printer setup:


Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>

email:sales@titanjet.com.cn

Add : No.6-2,Jin Hua Zhong Road,Zhongshan City,Guangdong,China

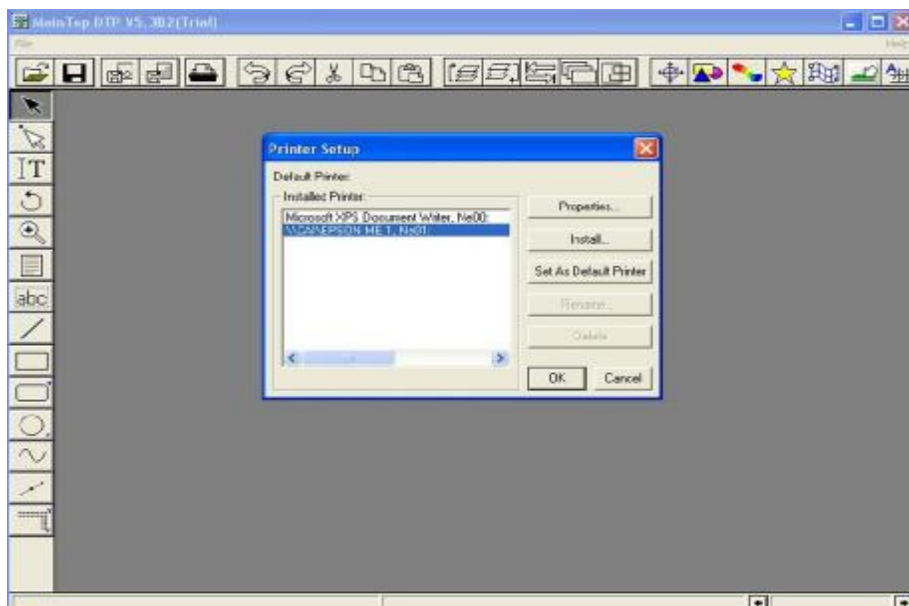

C、C、 Click the button: installing maintop printer



D, Choose self dei fication printer



E: Choose the right icc for Eco solvent or water base


Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>

email: sales@titanjet.com.cn

Add : No.6-2, Jin Hua Zhong Road, Zhongshan City, Guangdong, China

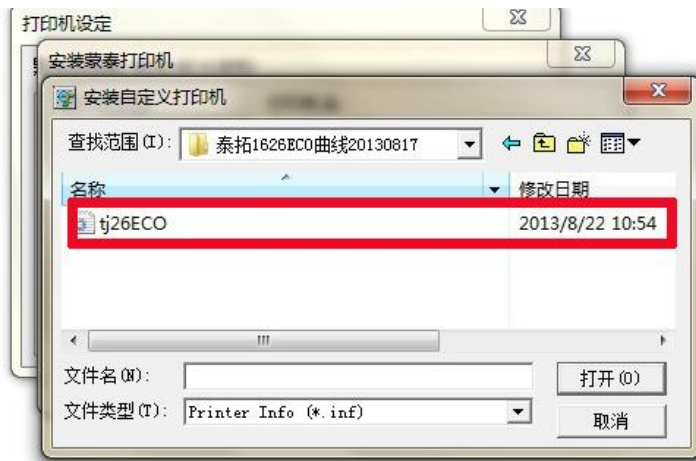


F、 Set the installed Model No. as default printer, installation finished.



2、 Using of software

a、 New file: Open software—file—new file

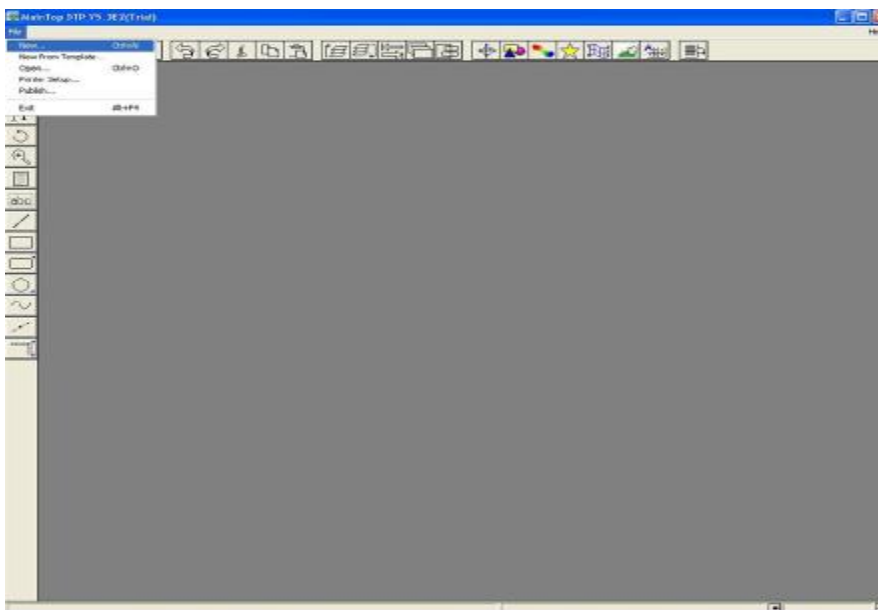

Tel : +86-760-88667089 / 88667090


Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>


email: sales@titanjet.com.cn

Add : No.6-2,Jin Hua Zhong Road,Zhongshan City,Guangdong,China

b. Setup the paper size in dialogue box.

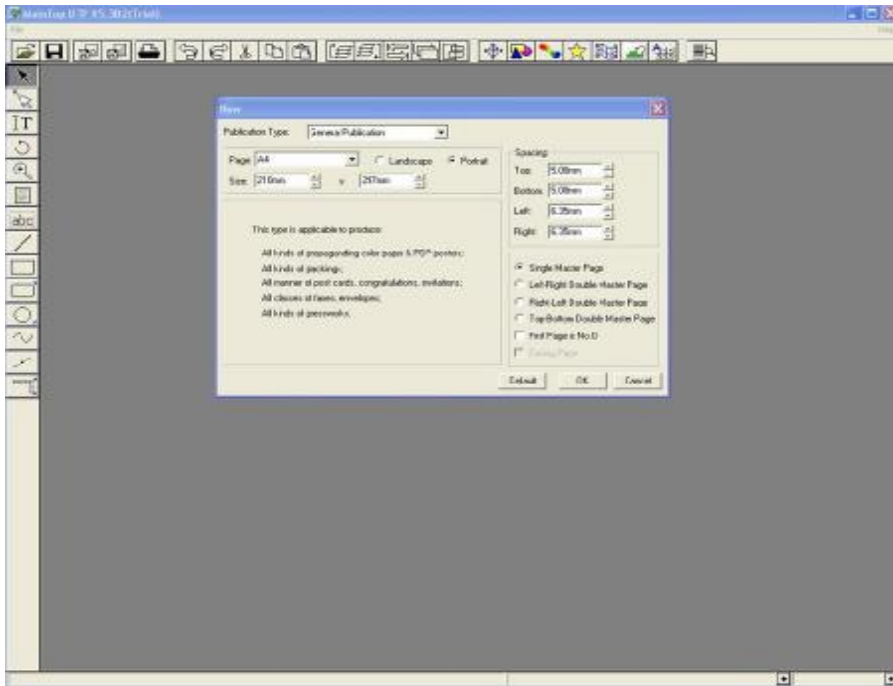

c. Import picture: file—Import picture

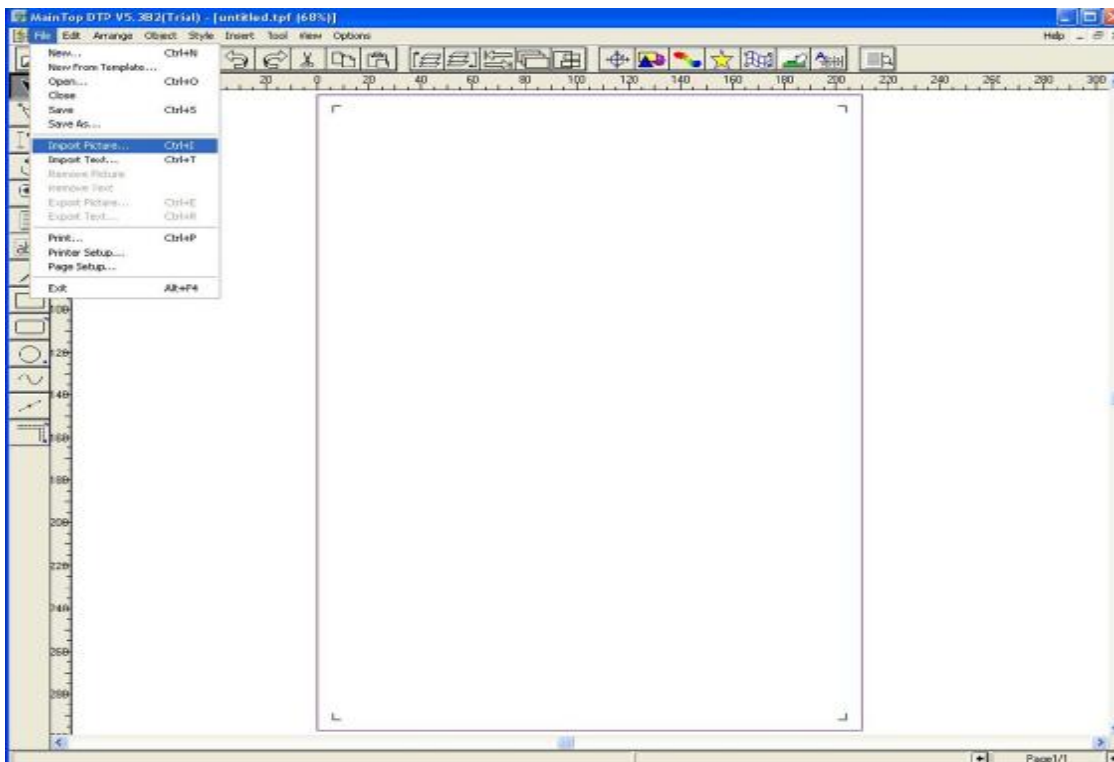

d. you'll see the dialogue box: Import graph file, choose the wanted picture- open


Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096


Web: <http://www.titanjet.com.cn>

email: sales@titanjet.com.cn

Add : No.6-2,Jin Hua Zhong Road,Zhongshan City,Guangdong,China

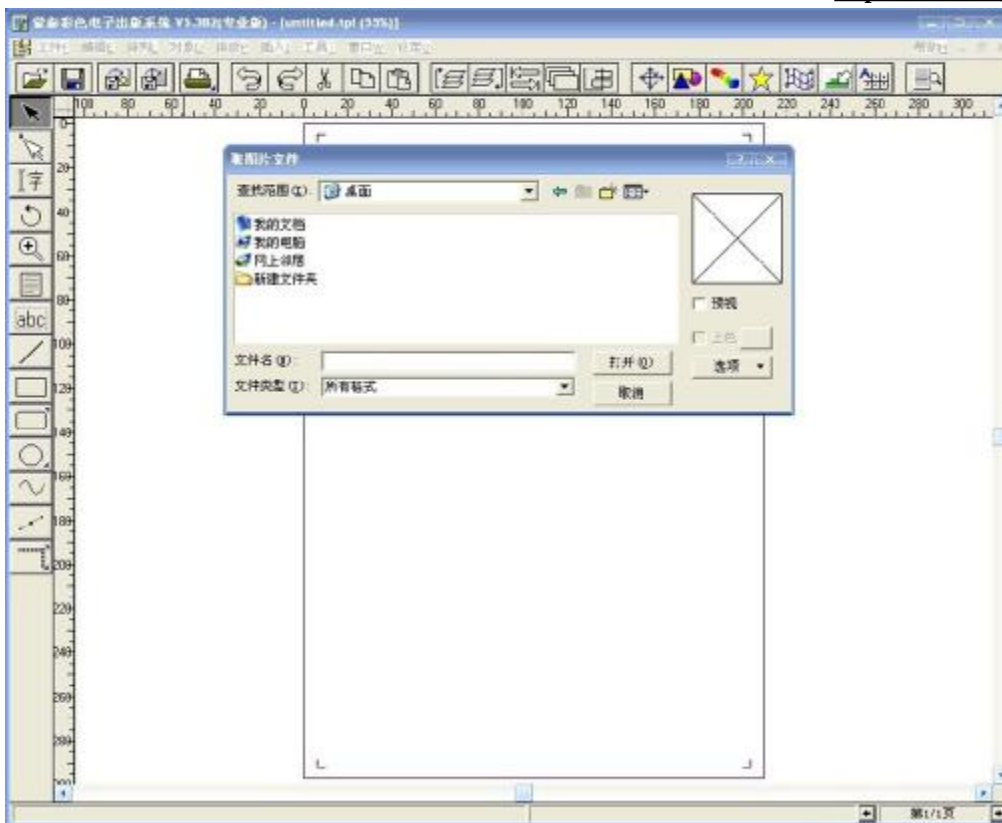

e、 choose the imported picture and click the mouse right button, click picture property.

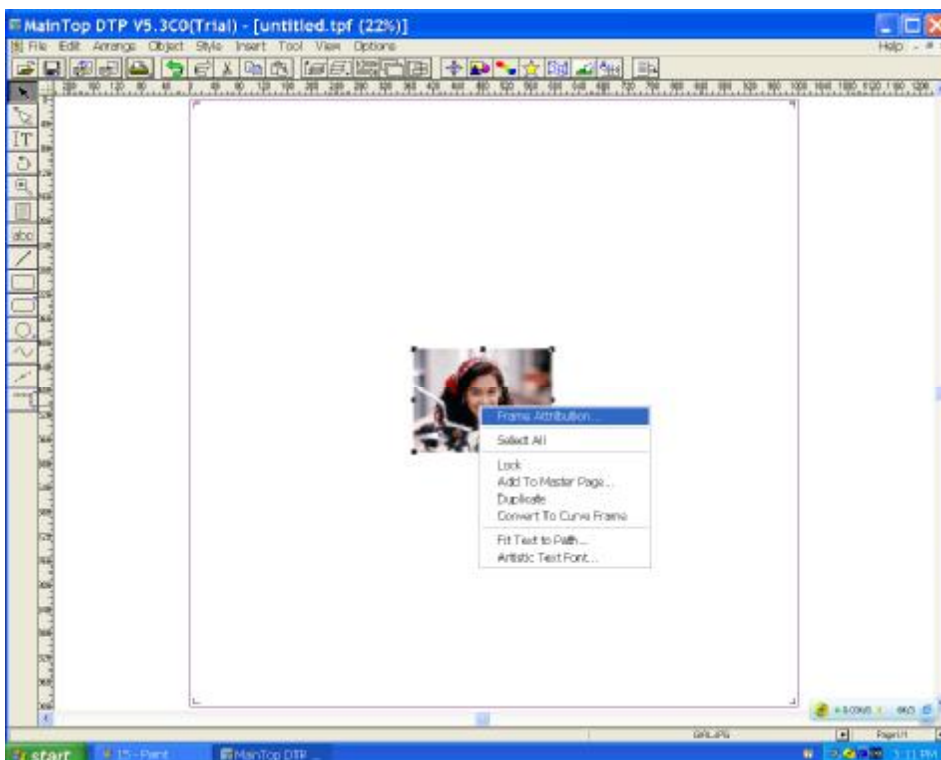

f、 modify the size of picture, choose change picture proportional then click OK


Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>


email: sales@titanjet.com.cn

Add : No.6-2,Jin Hua Zhong Road,Zhongshan City,Guangdong,China

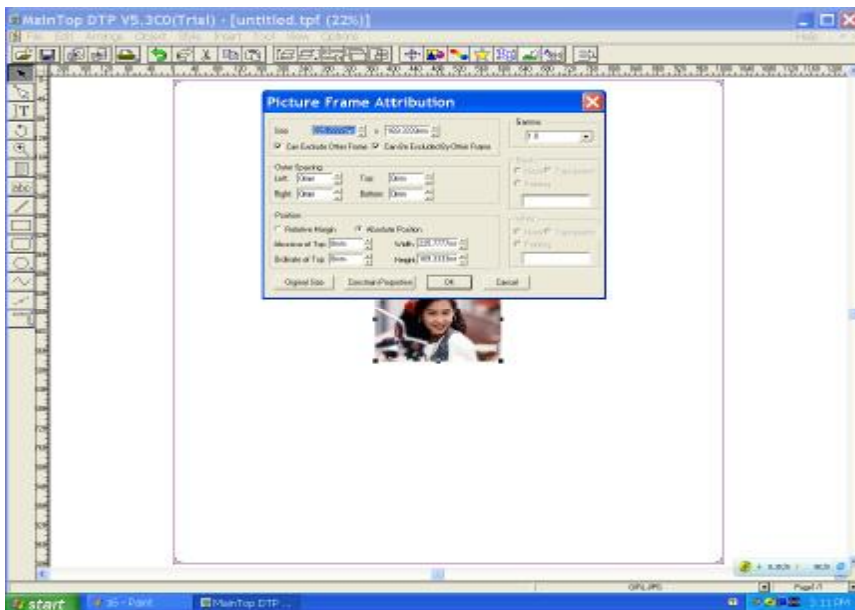

3.printing Image:

a、 open file—printing

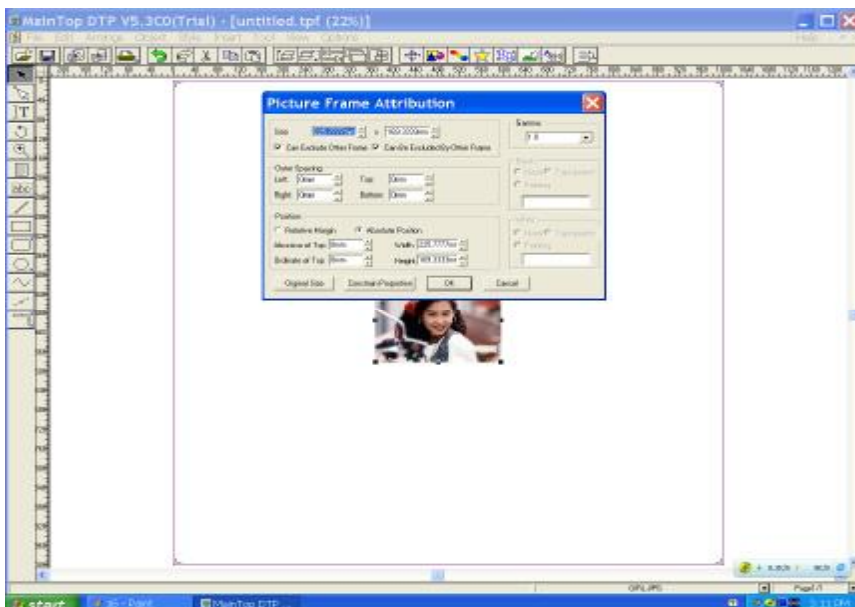

b、 in printing dialogue box, click printer setup button into the setting interface before printing


Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>

email:sales@titanjet.com.cn

Add : No.6-2,Jin Hua Zhong Road,Zhongshan City,Guangdong,China

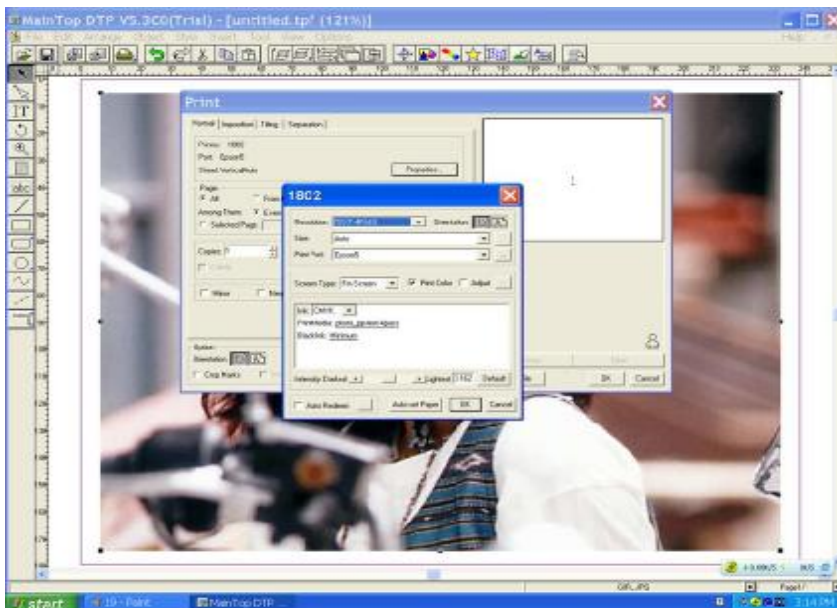

First set the resolution of the picture to be printing, then choose the matched paper type from paper type pull down menu, click OK. See illustration below:



Attention: the paper type of indoor water base will show as synthesis frontlit, outdoor oil base will show as self adhesive vinyl.

c、 we have 2 way for printing(to make sure the print port is Epson 5)

①Printing after RIP


Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>

email:sales@titanjet.com.cn

Add : No.6-2,Jin Hua Zhong Road,Zhongshan City,Guangdong,China

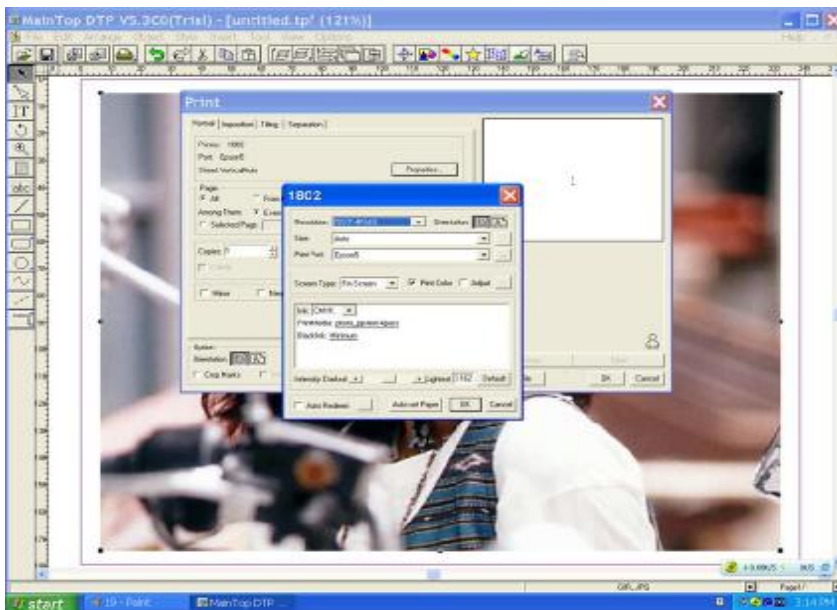

First, select the printing resolution and paper type you wanted, then click AUTOMATIC SETUP PAPER button, click OK, click print to file button, save file(format as *.prn)



②printing and RIP at same time:


Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096


Web: <http://www.titanjet.com.cn>

email:sales@titanjet.com.cn

Add : No.6-2,Jin Hua Zhong Road,Zhongshan City,Guangdong,China

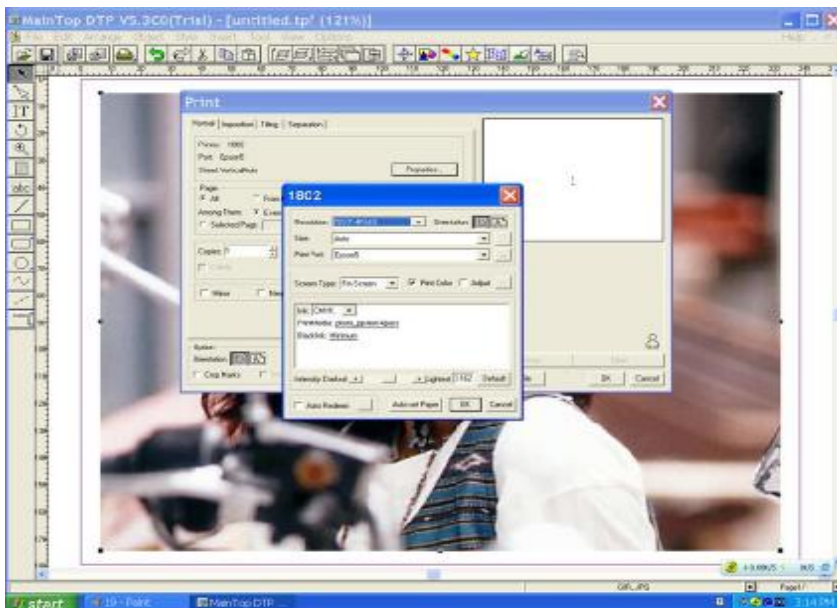

select the printing resolution and paper type you wanted, then click AUTOMATIC SETUP PAPER button, click OK, click printing.

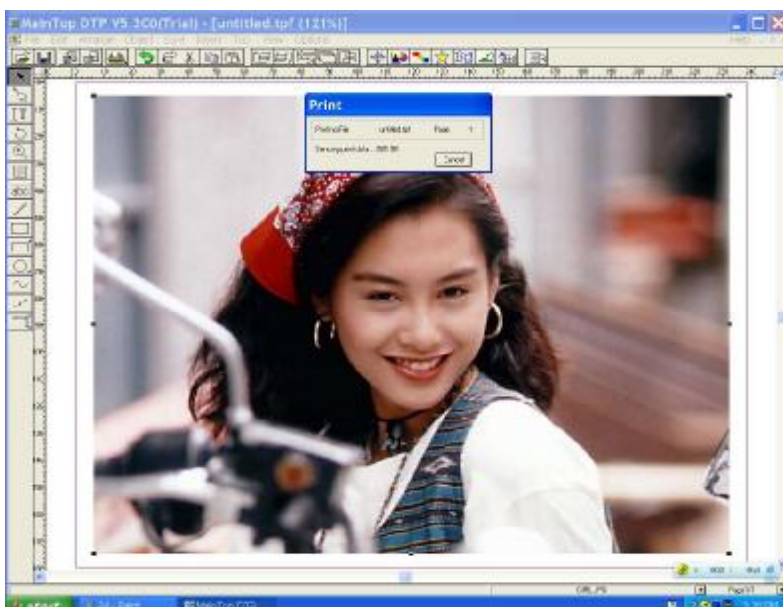

4、 Software related

A、 dimension compensation: when dimension tolerance existed between printed and designed picture, try to operate as the following step in Maintop software: click printer setup button in printing dialogue box, and the dialogue box of automatic compensation will appear.

Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>


email: sales@titanjet.com.cn

Add : No.6-2,Jin Hua Zhong Road,Zhongshan City,Guangdong,China



For example: you are planning to print a picture(expected width:100mm,expected height:100mm),in fact, the printed picture width is 100mm and height is 110mm,then you just need to adjust the printing height to 110mm in automatic compensation dialogue box, Click OK, your setup will be saved automatically.

B、Ink volume adjust: when color tolerance existed between printed and designed picture, try to operate as the following step in Maintop software: click printer setup button in printing dialogue box, and the color adjust dialogue box will appear. Use color management to get the color you wanted.

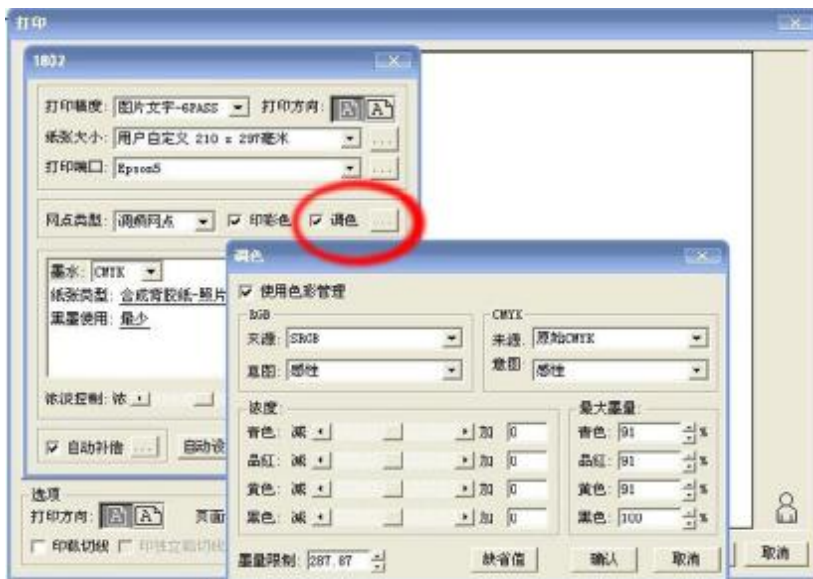

C、remind: other unaccomplished matter please refer to maintop users manual

Chapter V Printing control software

1、printing software and main board USB driver installation of TITAN-JET TT-1626 printer (connection of computer and printer)

1.1、 Find the control software CD of TT-1626 printer in spare part box, insert onto CD-ROM, find and double-click Titan Print –Epson exe setup icon, start installing.

Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>

email:sales@titanjet.com.cn

Add : No.6-2,Jin Hua Zhong Road,Zhongshan City,Guangdong,China



Click“next”



Click“next”



Choose file installation root, set Disk D as default, then click” next”

Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096


Web: <http://www.titanjet.com.cn>

email:sales@titanjet.com.cn

Add : No.6-2,Jin Hua Zhong Road,Zhongshan City,Guangdong,China



Click "next"

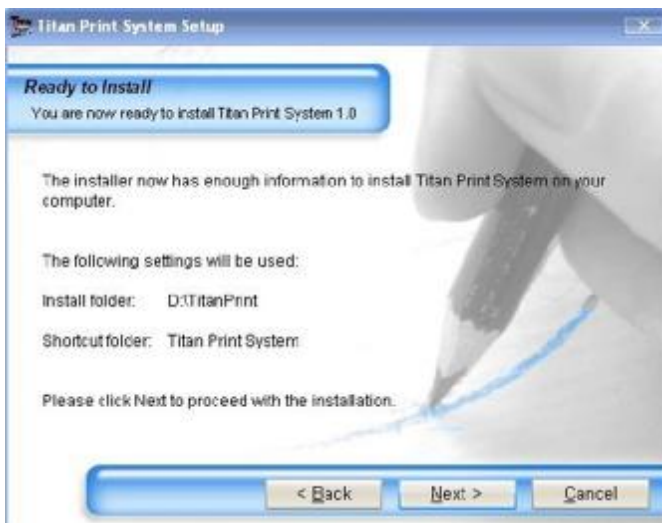

Click "next"



Software is installing...

Tel : +86-760-88667089 / 88667090


Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>

email: sales@titanjet.com.cn

Add : No.6-2, Jin Hua Zhong Road, Zhongshan City, Guangdong, China




Click "Finish", desktop will appear the icon:  , it means finished the installation of printing control software of TITAN-JET TT-1626 printer.

2、Open TITAN-JET TT-1626 control software



A、 Double click the icon  on desktop, or click start-procedure-Titan Print, you will open the control software interface as below (choose dye or eco solvent) :

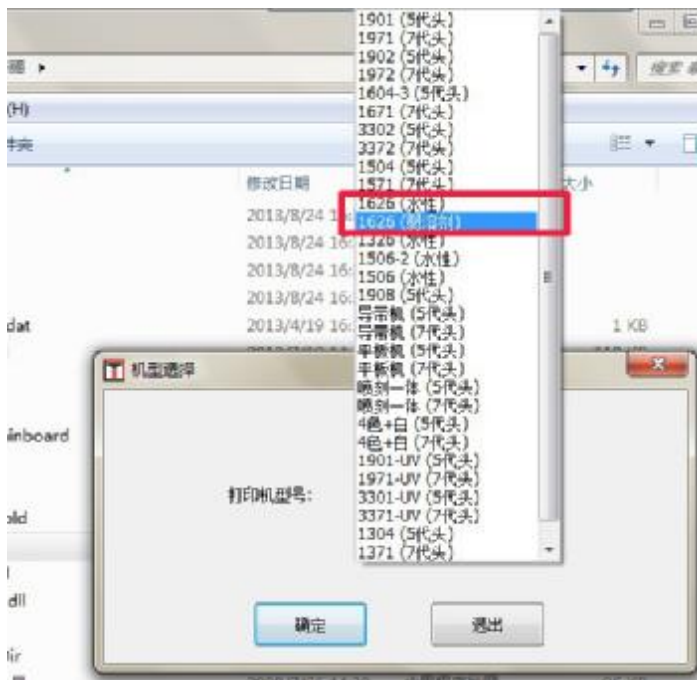

Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>

email: sales@titanjet.com.cn

Add : No.6-2, Jin Hua Zhong Road, Zhongshan City, Guangdong, China



B、 installation of main board USB driver

Click tools---choose INSTALL PRINTER DRIVER under the pull down menu

Attention: Printer could not connecting to computer while install printer driver!!



Install success, Click OK, you can printing now!!



C、 Connecting Printer to Computer

Connecting the USB cable to computer and printer, turn on printer, computer will show new hardware discovered. The new hardware is the main board USB driver of TITAN-JET TT-1626 printer, with install

Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>

email: sales@titanjet.com.cn

Add : No.6-2, Jin Hua Zhong Road, Zhongshan City, Guangdong, China


this hardware, computer will able to control the printer normally.



Click “next”



Click “finish” you can find the installed driver in equipment manager. (my computer—property---hardware-equipment manager) , see picture below

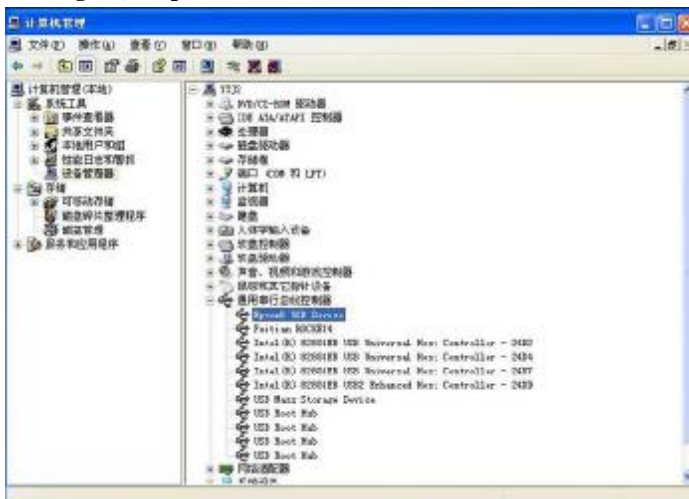

If you can not find the“Epson5 USB Device” in your computer or the“Epson5 USB Device” display with a question mark, it means the driver is failed to install.

2、Main Menu

Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>

email:sales@titanjet.com.cn

Add : No.6-2,Jin Hua Zhong Road,Zhongshan City,Guangdong,China



2.1、file menu

Click file menu, the pull-down submenu will show as below:



A、 Import File/Import Directory: add file/directory to be printed by printer

B、 Exit: exit control software

2.2、 printing menu



A、 Start print: start to printing current job

B、 Stop print: cancel the current printing job

C、 Pause: suspend the printing job during printing

D、 Resume: Continue to printing current job during pause

E、 Option: refer to setup of printing parameters (Details see tools menu introduction)

F、 Backup/Restore: you can backup/Restore the well performed parameters into a Disk

2.3、 Tools Menu



A、 Print Head Clear

B、 Voltage Adjust: Adjust voltage of Print head (non-Professional technicians are not suggested to operate)

C、 External Device Control: control of Take up system, feeding system and Fan device

D、 Clear up preview file: clear up the temporary files created by preview

E、 Clear up log file: clear up the printed file record

Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>

email:sales@titanjet.com.cn

Add : No.6-2,Jin Hua Zhong Road,Zhongshan City,Guangdong,China

F: Backup/Restore: see Backup/Restore in printing menu.

G: Statistic: the statistic of everyday printing job

H: Install Printer Driver: install main board USB driver, after install driver, computer could connecting to printer.

I: language: language transfer between Chinese and English

2.4、 Help Menu



A、 Go our web site

B、 About: Main board/head board serials number and version of control software

3、 Tool Menu



Icon introduction: From left to right in orderly:

A、 Import Rip file:

B、 Reset: Click one time, the carriage will return to home place

C、 Start print:

D、 Stop print:

E、 Pause:

F、 Resume:

G、 Parameter setting: setup related to printing parameters such as adjust stepping, direction, carriage speed and so on

H、 Remove Item

I、 Printer Tools: adjust voltage of ink pump and ink wiper

J、 Voltage Adjust: Adjust voltage of Print head (non-Professional technicians are not suggested to operate)


K、 Check Nozzle: Check ink spray status of nozzle, no breaks is normal, see illustration below:



L、 One Key Adjust

M: Exit: Exit control software

4、 Printing job List Menu



Show you the current file name, status, print mode, size, path and so on

5、 Usually parameter setting

Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>

email: sales@titanjet.com.cn

Add : No.6-2, Jin Hua Zhong Road, Zhongshan City, Guangdong, China



A、 Margin:

- a、 Zero to Paper: setup the margin according to position of material loaded by user
- b、 Paper Margin: Start printing distance to material edge

B、 Print Direction:

- a、 Single direction: Printing while carriage move to left direction, won't printing while move to right direction,
- b、 Double direction: Printing while carriage move to left and right direction

C、 Color Bar Setting:

- a、 Position: you can choose NO Color Bar or printing on left or right side
- b、 Width: Color Bar width while printing Color Bar
- c、 To Pic: Distance from Color Bar to the picture to be Printed

D、 Flash Frequency:

To avoid the nozzle been blocked and dried, also in order to keeping the nozzle in good spray status, you can choose the reasonable flash frequency to wet the nozzle when the printer is turn on but not running for printing, at the same time, the carriage will stay at home place.

E、 Stepping setting:

- a、 Stepping Number: How many mm that the printer printing 1 pass, different pass matches

different stepping number (stepping number will mention in the following text)

- b、 Feather: feather function armed, this can avoid the pass banding. Printing with feather mode is suggested

F: Apply (save)

Remember to click apply button after all parameters been setup, otherwise you've done a blank job.

6、 Status Bar



You can get information about what time the printing was started, what time was finished and delivery information of the main board and software, feedback information of Raster.

7、 control software related introduction

Parameter setting:

7.1、 Print head Setting


Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>

email: sales@titanjet.com.cn

Add : No.6-2, Jin Hua Zhong Road, Zhongshan City, Guangdong, China

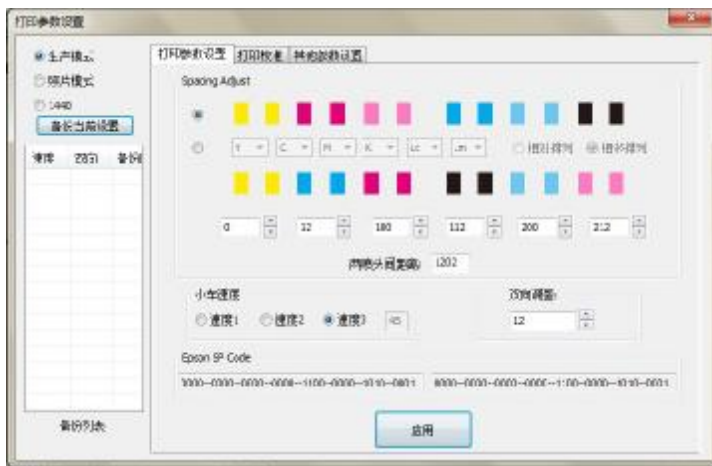


7.1.1、 users don't need to calibrate the print head by themselves due to the calibration has been done before export in factory.

7.1.2、 Head to Head: 1202 this is to adjust the 2 head distance. **Single print head printer no need to adjust.**


7.1.3、 Carriage speed: there are 3 mode speed of the carriage: speed 1, speed 2, speed 3 (Low speed, medium speed, High speed)

7.1.4、 Two-way Adjust: If you choose double direction in Usually Parameter setting, need to adjust two-way value. To confirm the printing start line if align or not, click testing, you will see the following printing:

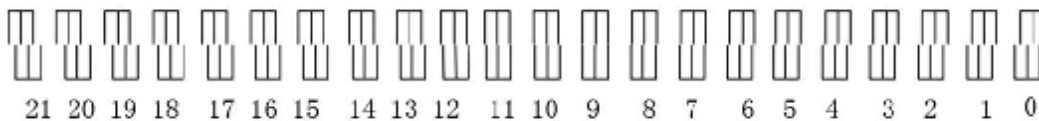

If the up and down line keep alignment at a digital, it means the two-way value is the one; you should type the digital to the Two-way value. For example, in the above printing, the up and down line keep alignment at digital 9, then you should type 9 into the two-way adjust.

7.2、 Adjust print head:

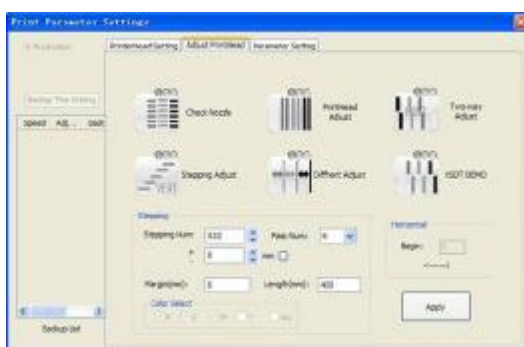

7.2.1、 Check Nozzle: see introduction of Tool Menu

7.2.2、 Print head Adjust: Adjust the X axis of single print head



Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>

email: sales@titanjet.com.cn

Add : No.6-2, Jin Hua Zhong Road, Zhongshan City, Guangdong, China

Click print head adjust, if the above situations happened, it means the installation of X axis of print head is incorrect, need to loosen the 3 screws on the print head, and push the print head to inside of the carriage, the tight the screws. See following picture:



The red line and blue line will keep alignment through move up of move down the print head.



7.2.3、Two-way Adjust: see details in 7.1.4

7.2.4、Stepping Adjust:



Pic 1: First time printing



Pic 2: Second time printing

Click Stepping Adjust, printer will printing two times, first time will printing 5 short lines, second time only one lines, and is longer than first time. If the longer line completely matched the middle line of first printing, it means the stepping is accurate. See above illustration Pic 2

If the longer line locates the up side of the middle line, it means you should add the stepping value. See the following picture



If the longer line locates the down side of the middle line, it means you should reduce the stepping value. See the following picture



Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096


Web: <http://www.titanjet.com.cn>

email: sales@titanjet.com.cn

Add : No.6-2,Jin Hua Zhong Road,Zhongshan City,Guangdong,China

You have to adjust the stepping according to the situation when you use the printer, to make sure the longer line printed at the second time match the middle line of first time printing

7.2.5 2-head vertical adjust

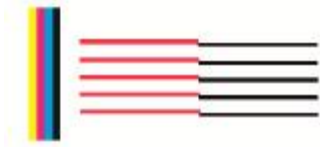

if this happens after you click 2-head ver adjust, it means the Y-axis of 2 head is not on same line, you have to loosen the print head 3 screws and push the print head close to inside, then tight the 3 screws until you get the following results:



7.2.6: 2-head horizontal adjust:



if these happens when you click 2-head horizontal adjust, it means the



value is not correct, you have to reduce the value for first situation and add the value for second situation, until you get the following results:



7.2.7、Stepping Number: Refer to Usually Parameter

7.2.8、Margin/Length: Refer to Usually Parameter

7.2.9、Color Select: you can select whatever color for adjust

7.3、Other Parameter setting


Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>


email: sales@titanjet.com.cn

Add : No.6-2,Jin Hua Zhong Road,Zhongshan City,Guangdong,China

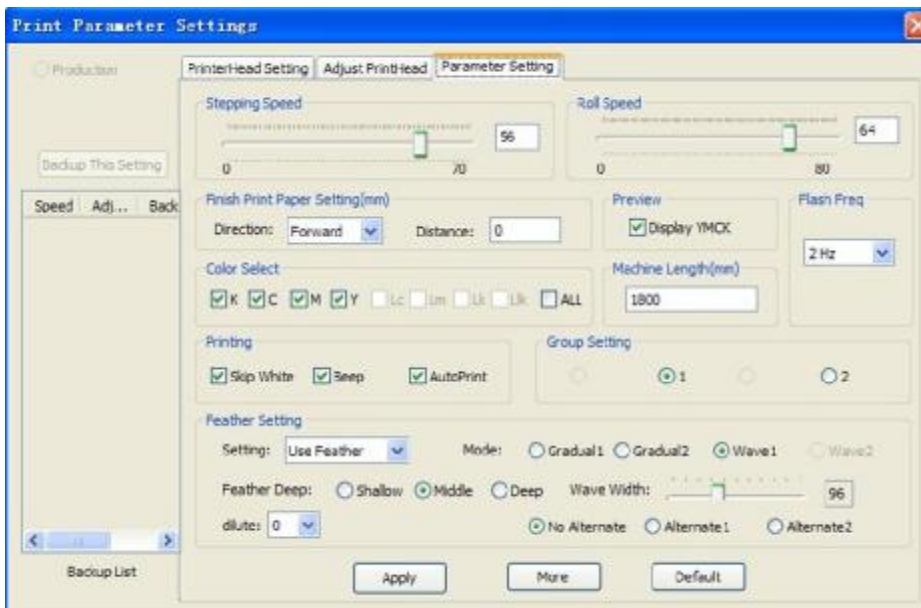


- 7.3.1、 Stepping speed: the speed of the material moving after printing 1 pass
- 7.3.2、 Roll Speed: speed of material move forward or backward when no printing.
- 7.3.3、 Finish Print paper setting: length of paper move forward or backward after finished printing (mm)
- 7.3.4、 Preview: color display on Control software interface
- 7.3.5、 Color select: select the color for printing
- 7.3.6、 Machine length: find the left direction icon on control software, click it and the carriage will move to left and stop, if it did not move to the max length, you have to change the value until the carriage can move the max length.
- 7.3.7、 Printing:
 - Skip white: printer won't printing the blank place, only printing where be with image.
 - Beep: the computer will alarm you when printing start.
 - Auto Print: select the file, will repeat printing the file automatically.
- 7.3.8、 Group setting: print head number installed, this model printer default for 2 pcs DX6 Epson head
- 7.3.9、 Feather: this can avoid the pass banding. Printing with feather mode is suggested, this is the default setting, no need to adjust.
- 7.3.10. More

This function requires technician password. Used by technician of factory to adjust the printer.

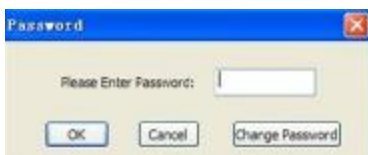


Press MORE button 

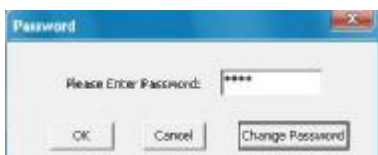


Input the Password: 1234 and click OK.

Please see following picture.

Tel : +86-760-88667089 / 88667090
Fax : +86-760-88667096
Web: <http://www.titanjet.com.cn>
email: sales@titanjet.com.cn
Add : No.6-2, Jin Hua Zhong Road, Zhongshan City, Guangdong, China

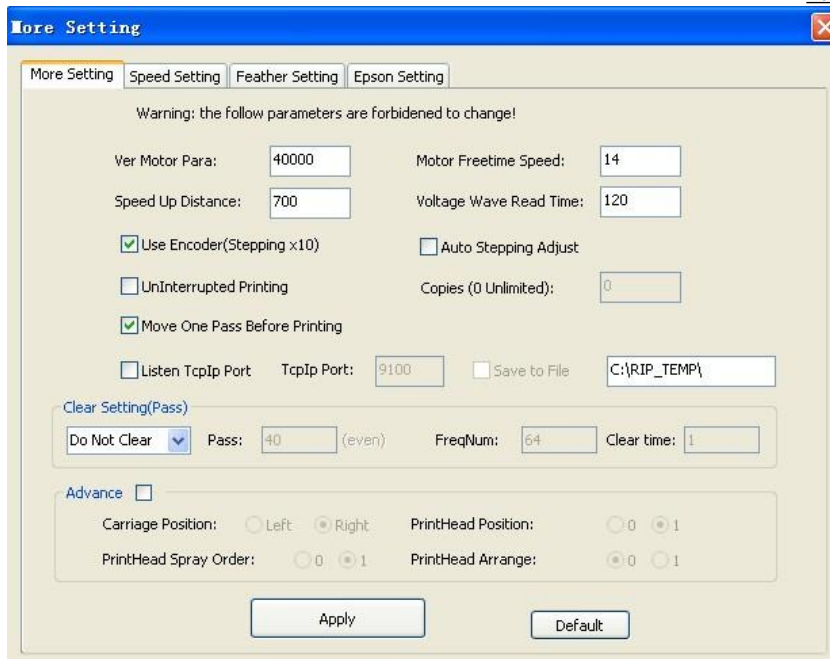

Attention: If you change the parameters, the printer will be abnormal and the responsibility should be beared by yourself.

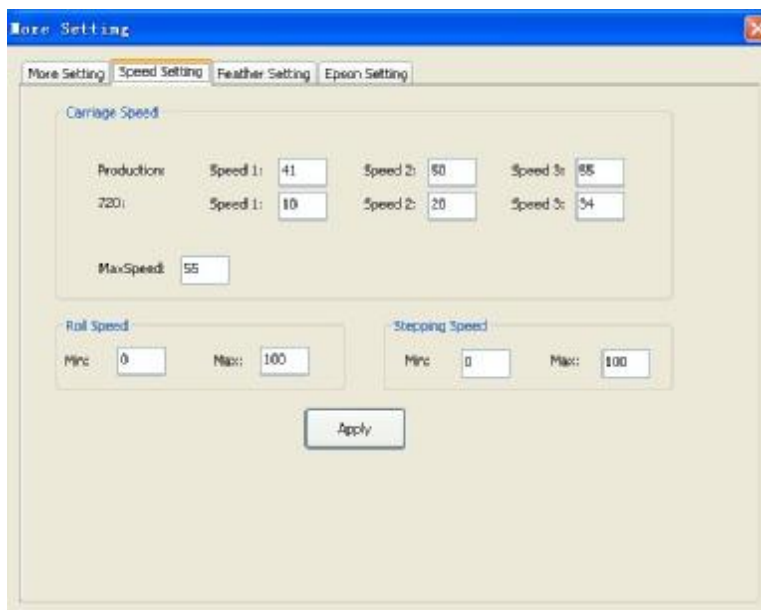

2,Speed value setup:

A: Carriage speed setup: operator can fix several best speed value which can make the printer printing well according to the printing experiences.

B: Roll speed: the speed of move forward or move backward by operator while printer no printing job.

C: Stepping speed: moving speed while finish 1 passes printing, adjust according to printing status.


Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096


Web: <http://www.titanjet.com.cn>

email:sales@titanjet.com.cn

Add : No.6-2,Jin Hua Zhong Road,Zhongshan City,Guangdong,China

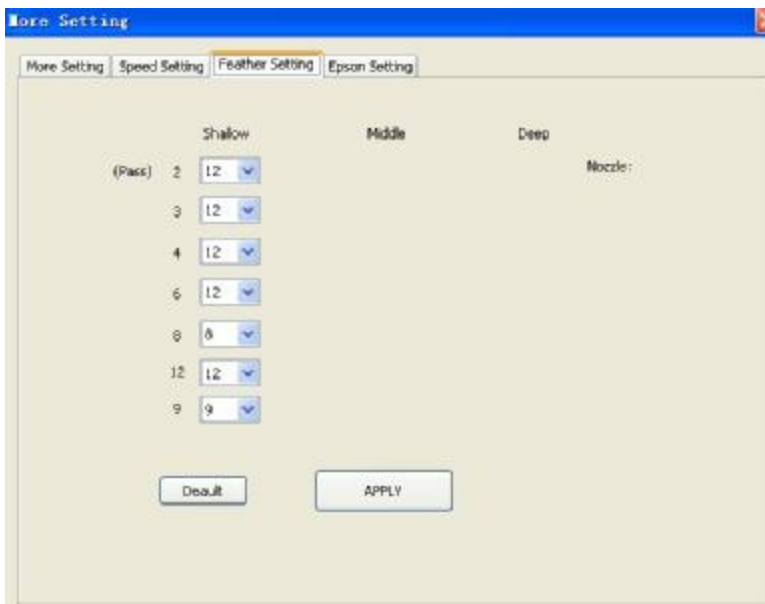

3、 Feather Setting: Only for technician of Manufacturer

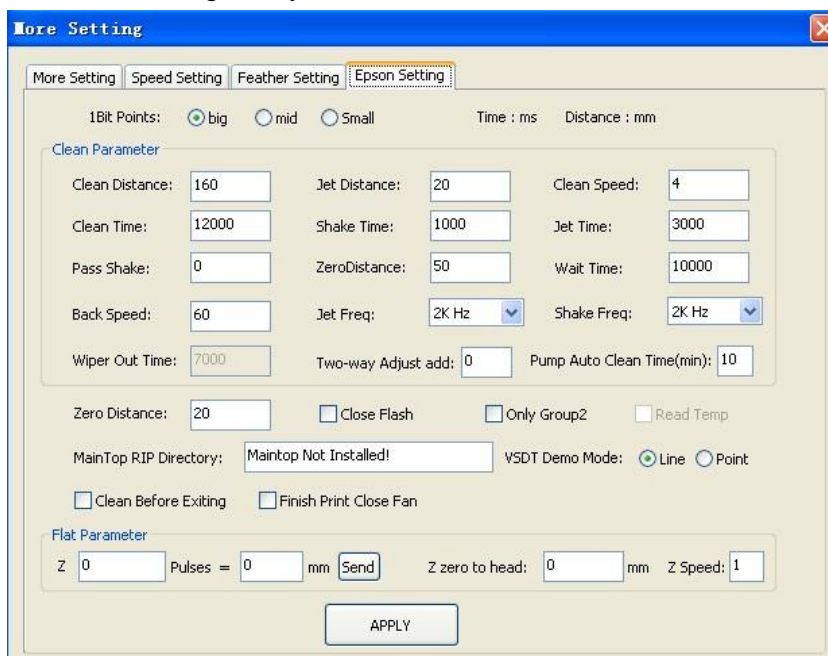

4、 Epson setting: Here we introduce 4 practical functions:

A: Cleaning print head time: the time for automatically cleaning print head, factory suggestion is between 4000-12000 milliseconds

B: Strong Spray time: to avoid ink mix together, the print head will perform a strong spray action after finish cleaning print head, operators can change the time as you like, to avoid wasting ink, factory suggestion is between 2000-5000 millisecond

C: Original position: the print head will stay at the original position and spraying while no printing job, and the sprayed ink may mix together at the print head, to avoid this happen, operator should setting carriage away from ink station

All the parameters are not allowed to change by users!

Tel : +86-760-88667089 / 88667090


Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>


email: sales@titanjet.com.cn

Add : No.6-2, Jin Hua Zhong Road, Zhongshan City, Guangdong, China

8、 Adjust after installed control software


8.1 After installed the control software, turn on printer, open printer tools  , click up or down under brush test to check the printer works well or not.If it works unnormal, contact and check the printer under the guide of distributor or factory technician



8.2 Click cleaning button  , to check carriage, ink pump and wiper works well or not. It should be working like this: the ink pump will pumping the waste ink in ink station with click cleaning button, and carriage move to home place and print head move close to capping, ink pump sucking ink from print head for 10 seconds, the wiper move out while the carriage will move back and print head spray out ink, the wiper should be 0.5-1mm higher than print head.

8.3、 Adjust the distance between print head and media of TITANJET 1626 PRINTER

According to different printing media thickness, adjust the carriage height, the ideal distance between print head and media is 1mm, to avoid print head scratch the media and damage the printed picture, you'd better to adjust the carriage height, but max distance not exceed 3mm.the method to adjust the height of carriage is to loosen the 4 screw on the carriage, then tighten them after you get the wanted height, see the following picture.

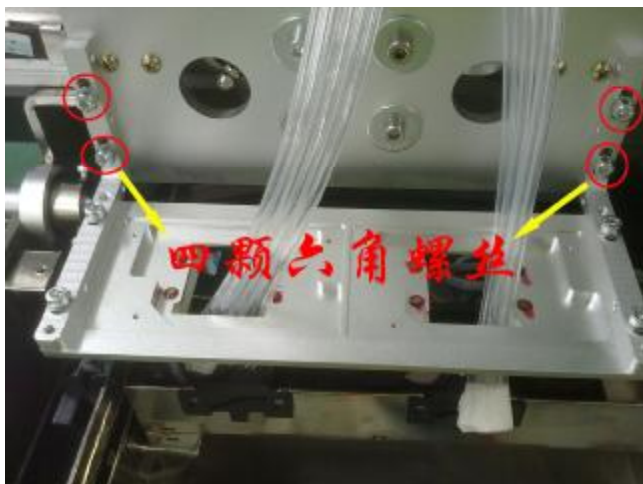

(Attention, For print head safety, before installing, use Maintop to RIP a picture with 1.5X1M and printing to make sure the machinery works well, then install the print head!!)

Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>

email:sales@titanjet.com.cn

Add : No.6-2,Jin Hua Zhong Road,Zhongshan City,Guangdong,China

8.4、 feeding of ink

Attentions:

- 8.4.1、 Keep ink out of the reach of children;
- 8.4.2、 Washing with fresh water if ink splash into eye
- 8.4.3、 to clean ink tube, use the solvent along with the printer
- 8.4.4、 suggested ink temperature between 18°C to 30°C
- 8.4.5、 store the ink at a cool, room temperature place, avoid to exposure ink to hot, cold place and sunlight
- 8.4.6、 use the ink after open,
- 8.4.7、 if ink freeze, move to normal temperature place for dissolving for several hours。
- 8.4.8、 washing your hands or clothes if ink splashed on hands or clothes
- 8.4.9、 Don't try to disassembly ink box
- 8.4.10、 ink is chemical product. for better environment, kindly disposal the empty ink bottle, damaged ink tank and waste ink
- 8.4.11、 don't remove dampers while feeding ink
- 8.4.12、 use the ink specified, don't mix use with others
- 8.4.13、 don't shaking the bottle while feeding ink, feeding ink slowly while printer stopped working to avoid air bubble generated

Feeding ink into ink tank and put into ink tank holder

Attention: the correct ink tank order is : **Y1** **Y2** **M1** **M2** **Lm1** **Lm2** **C1** **C2** **Lc1** **Lc2** **K1** **K2**

8.4.14、 use a injector to transfer ink from ink tank to damper, each color at least 20ml and the ink level of damper should be the same: 2/3 of the damper volume.

8.5、 Installation of print head, sucking adjust of ink station and connecting of data cable.



A、 Connecting to print head: (**Attention: be careful when connecting to avoid damage print head and data cable !**) To avoid ink or other liquid goes inside of the Print head, it is better to seal the cable connection by tape, see following picture:

Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>

email: sales@titanjet.com.cn


Add : No.6-2, Jin Hua Zhong Road, Zhongshan City, Guangdong, China

- 39 -



Each print head has 6 line nozzles, each line of nozzle has a specified input of ink and each print head has 2 port for connecting flat cable. See following picture.



There are 12 dampers and the ink tube order from left to right side are: Y1 Y2 M1 M2 Lm1 Lm2 C1 C2 Lc1 Lc2 K1 K2 . Turn on Printer and open the control software after carriage reset, then click cleaning button , it will spend 30second or 1 minute to finish cleaning. check the ink pump if can pump ink out during cleaning. It is important, if can not, adjust the position of the ink station or stopper buffer until ink can be pump out well, it spend times, see the following adjust references:

Loose and tighten screw 1、 2、 3、 4 could adjust the position of ink station. Loose and tighten screw a、 b、 c、 d could adjust the height of ink station



C、 turn off printer after ink pump can work well(working voltage of ink pump can be modified by adjust tools in control software,6v-15v is the normal working voltage), turn off the printer and connecting the print head data cable

Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>

email:sales@titanjet.com.cn

Add : No.6-2,Jin Hua Zhong Road,Zhongshan City,Guangdong,China

to head board.

The pin number of each flat cable is different,one is 23 pins, one is 13 pins, see the following picture:

(Attention: be care of the direction of the insert port while connecting the head board!)





Make sure the connection of print head data cable is correct before turn on printer, then printing the test bar, the print head is in good performance if all lines been printed. See following picture:




If the printer did not printed the test bar well, cleaning the print head until the printing in good performance. you can start to printing if the test bar printed perfect picture as the picture.

6、voltage adjustment:

Close printing control software , find the icon  in installation file,click the on/off

button  Choose language ,you can read the temperature now, if voltage value need to be

changed, type the voltage value into the 26 box as following picture:click set  :



Tel : +86-760-88667089 / 88667090





Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>

email:sales@titanjet.com.cn

Add : No.6-2,Jin Hua Zhong Road,Zhongshan City,Guangdong,China

7、adjust:

Close printing control software, find the icon  in installation file,click the on/off button  Choose language ,choose ,change down and up value,you can adjust the wiper position:



Chapter V Maintenance guide

5.1 maintenance of machine

5.1.1、 the steel beam must be cleaned by paper every half month, and apply bearing lubrication after clean to avoid the worn of bearing.

5.1.2、 other parts is according to the actual operation of printer:

A、 the pinch roller

B、 gear on take up and feeding system

Kindly tips:

To avoid effect the print speed, the recommended computer configure is:

CPU: higher than P4 dual core 3.0G

ROM: at least 2GB

Hard disk: at least 160G

Main board: at least compatible with PC/945

CD ROM: 1 pcs

Monitor: VGA true color

Operation System: Windows XP

Tel : +86-760-88667089 / 88667090

Fax : +86-760-88667096

Web: <http://www.titanjet.com.cn>

email:sales@titanjet.com.cn

Add : No.6-2,Jin Hua Zhong Road,Zhongshan City,Guangdong,China

- 42 -